



LINX[™] Cordless Signature



OWNER'S MANUAL

GUIDE D'UTILISATION • MANUAL DEL USUARIO

Operating and Servicing Instructions

Please read these instructions carefully before using your HOOVER® Stick Vac.

Be sure to register your product online at Hoover.com or call 1-800-944-9200 to register by phone.

Instructions d'Utilisation et d'Entretien


Veillez lire attentivement ces instructions avant d'utiliser votre aspirateur vertical HOOVER®. N'oubliez pas d'enregistrer votre produit en ligne, à l'adresse Hoover.com, ou par téléphone, au 1-800-944-9200.

Instrucciones de Funcionamiento y Mantenimiento

Lea atentamente estas instrucciones antes de usar su Barredora de succión HOOVER®. Inscriba su producto en línea en Hoover.com, o llame al 1-800-944-9200 si prefiere hacerlo por teléfono.

©2016 Techtron Floor Care Technology Limited. All Rights Reserved. Tous droits réservés. Todos los derechos reservados. #960009636 ID100858-R0

1. FEATURES

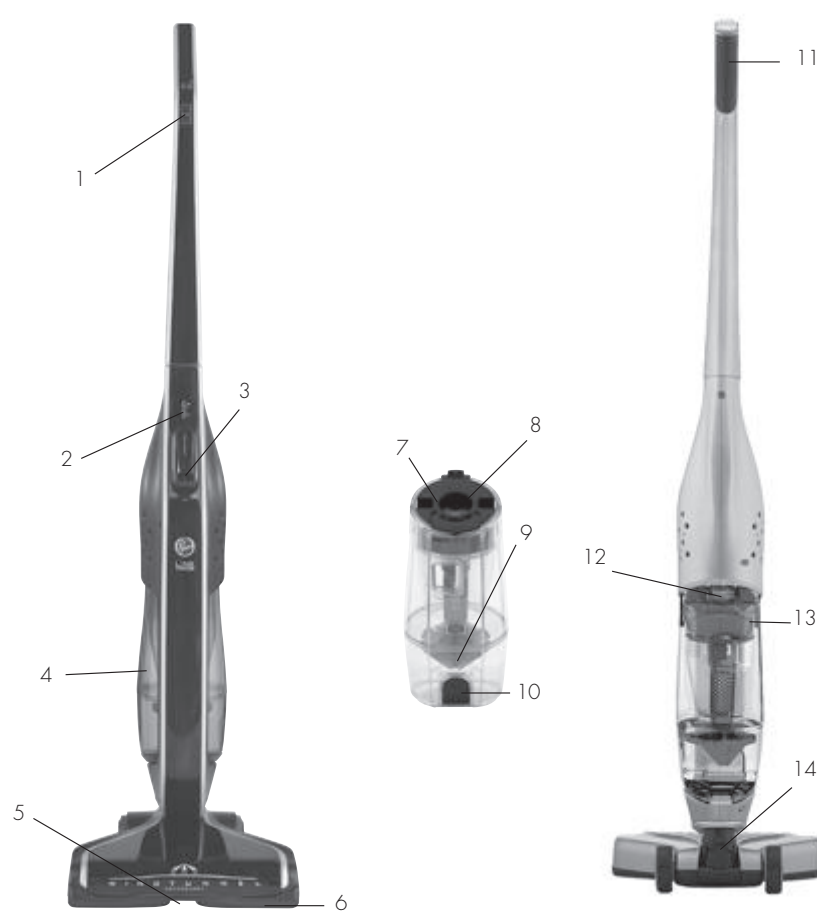

1.1 FRONT	DIRT CUP AND FILTER	BACK
1. On/Off Switch (0=OFF, I=Suction ON, II=Suction and Brush ON)	7. Filter Cap	11. Handle
2. Fuel Gauge	8. Filter (inside filter cap)	12. Dirt Cup Release Button
3. Battery Cavity	9. Baffle Tube	13. Carry Handle
4. Dirt Cup	10. Bottom Empty Release Button	14. Nozzle Release Button
5. Large Debris Opening		
6. Bottom Nozzle Cover (underneath nozzle)		

If you need assistance:

Visit our website at Hoover.com. Follow the authorized dealer locator link to find the Hoover authorized dealer nearest you or call 1-800-944-9200 for an automated referral of Hoover authorized dealer locations (U.S. only) or to speak with a customer service representative, Mon-Fri 8am-7pm EST.


PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.

2. HOW TO OPERATE


Assembly



Line up nozzle with main body and firmly push nozzle into body of unit until nozzle locks into place. NOTE: To remove, push release button and pull the nozzle away from the body of the unit.

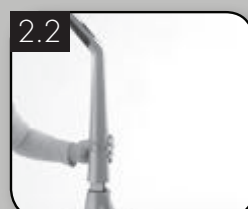

Insert handle into body. NOTE: Ensure handle faces proper direction.

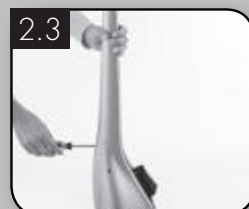

Insert screw and tighten until secure. NOTE: DO NOT over tighten screw.




Charge battery fully before first use. Fully discharged battery will take up to 3 hours to charge. NOTE: See battery and charging manual for battery charging instructions. Use only manufacturer's supplied or recommended battery and charger.



Insert charged battery into battery cavity until latch is locked into place. NOTE: When inserting and removing battery, ensure the switch is in the off position marked "O".



Hold down nozzle with foot and tilt back to reclining position.

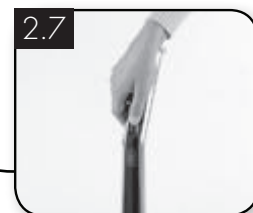

To turn vacuum on, roll button forward.

PUSH DIAL:

- O - OFF
- I - Suction ON
- Recommended for use on **hard floors**
- II - Suction and Brushroll ON
- Recommended for use on **carpet**



To remove and charge battery, turn switch to off position. Pull on release lever located on end of battery and pull out gently.

3. MAINTENANCE

Dirt Cup & Filter Removal & Replacement

IMPORTANT: For best results, clean after each use.

REGULAR MAINTENANCE: Each time the dirt cup is emptied, the filter should be cleaned (Filter will be discolored after use. This will not affect the filter's performance.)

Dirt Cup Removal and Cleaning



To Remove dirt cup, depress the dirt cup release button located on the top of the dirt cup and tip away from the body of the unit.





Press dirt cup empty button over trash can to release debris. Push door closed until latch clicks.



Dirt Cup Debris and Clog Removal

In order to maintain optimum performance of your cleaner, each time the dirt cup is removed for emptying it is recommended to check if there is any debris trapped in the dirt tube (A). If so, remove the debris before re-attaching the dirt cup to the cleaner.

If you still are experiencing reduced suction/performance, detach the nozzle base from the main unit (press button on back of nozzle to release, B) and inspect both openings of the nozzle base (C) for any trapped debris. Remove any debris that may be present before re-attaching the nozzle base to the main body of the cleaner.

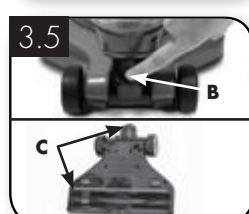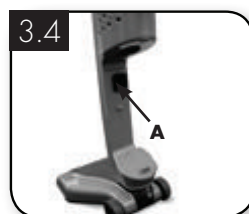

Filter Removal and Cleaning



Pull out filter cap. Pull out filter and brush clean. Rinse under cold water as needed.



WARNING: Always dry filter for 24 hours before replacing.
WARNING: Do not use detergent or hot water to clean filter.

For filter replacement, please call 1-800-944-9200 or visit our website at www.hoover.com to locate a dealer nearest you. Filter Service Part # **410044001**.

Dirt Cup and Filter Replacement



REPLACEMENT
Insert filter into filter cap.



Insert filter cap into dirt cup.




Place bottom of dirt cup onto housing and pivot into place until dirt cup release button locks.


Baffle Tube Removal and Replacement



REMOVAL
Hold dirt cup right side up and press bottom release button to open trap door.

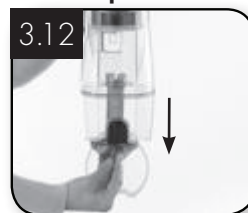


Turn baffle tube counter clockwise until it stops. Pull out baffle tube, hold over trash can and shake free debris.

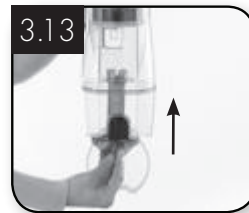

REPLACEMENT
To replace baffle tube, insert back into dirt cup, align slots and twist clockwise till tube locks in place.

Belt and Brushroll Replacement

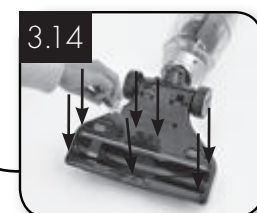

WARNING: Remove battery before servicing. Turn vacuum nozzle over. Remove screws indicated by arrows on bottom nozzle plate. Lift plate off nozzle bottom to access brush, belt and nozzle.

After replacement turn brushroll making sure belt turns freely. Return nozzle plate and screws.

For belt replacement, please call 1-800-944-9200 or visit our website at www.hoover.com to locate a dealer nearest you. Belt Service Part # **001942002**

4. BATTERY FUEL GAUGE, DISPOSAL & SERVICE

Battery Fuel Gauge: Battery Capacity Indicator Information

All three LEDs will momentarily light when the product's power switch is turned on. Then the Battery Fuel Gauge will indicate the pack's remaining capacity as noted below. NOTE: Unit and lights will turn off when battery is fully discharged. Once battery is fully discharged return switch to off position.

3 LED's lit Remaining battery capacity > 75% 1 LED lit Remaining battery capacity > 25%
2 LED's lit Remaining battery capacity > 50% 1 LED blinking Remaining battery capacity < 25%

Battery Disposal

WARNING: RISK OF EXPLOSION OR EXPOSURE TO TOXIC MATERIAL

CAUTION: The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, heat above manufacturer's maximum temperature limit (60°C/140°F), or incinerate. Replace battery with HOOVER® battery Part # BH50000 REV B only. Use of another battery may present a risk of fire or explosion. Dispose of used battery promptly. Keep away from children. Do not disassemble and do not dispose of in fire.

Do not attempt to disassemble the battery or remove any component projecting from the battery terminals. The battery and charger have no user serviceable parts. Fire or injury may result. Prior to disposal, protect exposed terminals with heavy insulating tape to prevent shorting.



4. BATTERY FUEL GAUGE, DISPOSAL & SERVICE

(continued)

Lithium-ion Batteries

The battery must be collected, recycled or disposed of in an environmentally sound manner. The EPA certified RBRC Battery Recycling Seal on the lithium-ion (Li-ion) battery indicates Techtron Industries, a corporate affiliate of Hoover, Inc., is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC program provides a convenient alternative to placing used Li-ion batteries into the trash or the municipal waste stream, which may be illegal in your area.

Please visit www.rbrc.org/call2recycle/ for information on Li-ion battery recycling and disposal bans/restrictions in your area. Hoover, Inc., involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.

Service

ANY SERVICING SHOULD BE DONE BY AN
AUTHORIZED SERVICE REPRESENTATIVE
Call 1-800-944-9200 USA & Canada

In the event that further assistance is required, see your Yellow Pages for an authorized HOOVER® Dealer or visit www.hoover.com. Costs of any transportation to and from any place of repair are to be paid by the owner. The service parts used in this unit are easily replaced and readily available from an authorized HOOVER® Dealer or retailer. Always identify your product by the model number and manufacturing code when requesting information or ordering replacement parts. (The model number appears behind the dirt cup of the product.)

5. TROUBLESHOOTING

If a minor problem develops, it usually can be remedied quite easily when the cause is identified by using the checklist below.

Any other servicing should be done by an authorized service representative.

WARNING: To reduce risk of personal injury - unplug vacuum before servicing.

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
Product does not turn on	1. Battery is not in product. 2. Battery is not inserted properly. 3. Battery is not charged. 4. Battery is too hot. 5. Internal component damage.	1. Insert battery into product. 2. Make sure battery is fully seated in battery cavity. 3. Remove and charge battery or replace with second charged battery. 4. Remove battery and let cool for 30 minutes, replace battery and retry or replace with second charged battery. 5. Call for service: 1-800-944-9200
Product turns off while in use	1. Battery is fully discharged. 2. Battery is too hot. 3. Internal component damage.	1. Remove and charge battery or replace with second charged battery. 2. Remove battery and let cool for 30 minutes, replace battery and retry or replace with second charged battery. 3. Call for service: 1-800-944-9200
Product does not pick up dirt	1. Dirt cup may be full. 2. Filter may be dirty. 3. Baffle tube may be dirty. 4. Airpath may be clogged. 5. Internal component damage.	1. Empty dirt cup. 2. Clean and/or wash filter. 3. Remove and clean. 4. Make sure the battery is removed and the product is off. Remove nozzle by pressing the nozzle release button and pulling the nozzle in a downward motion. Remove any debris clogged in the nozzle airpath. Reassemble nozzle to the product. 5. Call for service: 1-800-944-9200
Brushroll will not turn	1. Brushroll may have an obstruction. 2. Motor protection device tripped. 3. Broken belt.	1. Make sure the battery is removed and the product is turned off. Remove nozzle by pressing the nozzle release button and pulling the nozzle in a downward motion. Remove any debris clogged in the nozzle airpath. Reassemble nozzle to the product. 2. Turn product to off position, product will reset in approximately 30 minutes. 3. Make sure the battery is removed and the product is off. Remove nozzle cover replace with recommended belt and replace nozzle cover. 4. Call for service: 1-800-944-9200

Limited TWO Year Warranty (Domestic Use)

WHAT THIS WARRANTY COVERS
When used and maintained in normal household use and in accordance with the Owner's Manual, your HOOVER® product is warranted against original defects in material and workmanship for a full two year from date of purchase (the "Warranty Period"). During the Warranty Period, Hoover® will provide labor and parts, at no cost to you, to correct any such defect in products purchased in the United States, U.S. Military Exchanges and Canada.

HOW TO MAKE A WARRANTY CLAIM
If this product is not as warranted, take or send the product to a Hoover® Authorized Warranty Service Dealer along with proof of purchase. For an automated referral to authorized service outlets in the U.S.A., phone: 1-800-944-9200 OR visit Hoover online at www.hoover.com.

WHAT THIS WARRANTY DOES NOT COVER
This Warranty does not cover use of the product in a commercial operation (such as maid, janitorial and equipment rental services), brushroll, belt, improper maintenance of the product, damage due to misuse, acts of God, nature, vandalism or other acts beyond the control of Hoover, owner's acts or omissions, use outside the country in which the product was initially purchased and resales of the product by the original owner. This warranty does not cover pick up, delivery, transportation or house calls. However, if you mail your product to a Hoover Authorized Warranty Service Dealer, cost of shipping will be paid one way.

This warranty does not apply to products purchased outside the United States, including its territories and possessions, outside a U.S. Military Exchange and outside of Canada. This warranty does not cover products purchased from a party that is not an authorized retailer, dealer, or distributor of Hoover products.

OTHER IMPORTANT TERMS
This Warranty is not transferable and may not be assigned. This Warranty shall be governed and construed under the laws of the state of Ohio. The Warranty Period will not be extended by any repair or replacement under this Warranty.

THIS WARRANTY IS THE EXCLUSIVE WARRANTY AND REMEDY PROVIDED BY HOOVER®. ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE, ARE DISCLAIMED. IN NO EVENT WILL HOOVER® BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR NATURE TO OWNER OR ANY PARTY CLAIMING THROUGH OWNER, WHETHER BASED IN CONTRACT, NEGLIGENCE, TORT OR STRICT PRODUCTS LIABILITY OR ARISING FROM ANY CAUSE WHATSOEVER. Some states do not allow the exclusion of consequential damages, so the above exclusion may not apply to you. This warranty gives you specific rights; you may also have others that vary from state to state.

FRANÇAIS

CET ASPIRATEUR A ÉTÉ CONÇU POUR USAGE DOMESTIQUE SEULEMENT. CONSIGNES DE SÉCURITÉ IMPORTANTES

AVERTISSEMENT : L'ASSEMBLAGE DE L'APPAREIL COMPREND DES PETITES PIÈCES. CES DERNIÈRES PRÉSENTENT UN DANGER D'ÉTOUFFEMENT.

- Pendant l'utilisation d'un appareil électrique, toujours prendre des précautions élémentaires, notamment :
- **LIRE TOUTES LES INSTRUCTIONS AVANT D'UTILISER CET APPAREIL.**
- **TOUJOURS SUIVRE CES CONSIGNES DE SÉCURITÉ.**
- **POUR CONNAÎTRE LES INSTRUCTIONS RELATIVES À LA CHARGE DE LA PILE, CONSULTER LE GUIDE D'UTILISATION DE LA PILE ET DU CHARGEUR (GUIDE SÉPARÉ).**
- **NE PAS LAISSER L'ASPIRATEUR SANS SURVEILLANCE.**
- **AVERTISSEMENT : ASSEMBLER ENTièrement L'ASPIRATEUR AVANT DE L'UTILISER.**
- **MISE EN GARDE : CE PRODUIT CONTIENT DES SUBSTANCES CHIMIQUES RECONNUES PAR L'ÉTAT DE LA CALIFORNIE COMME CAUSANT LE CANCER, DES ANOMALIES CONGÉNITALES OU DES PROBLÈMES DE REPRODUCTION.**

AVERTISSEMENT : AFIN DE RÉDUIRE LES RISQUES D'INCENDIE, DE CHOC ÉLECTRIQUE OU DE BLESSURES :

- Ne pas utiliser l'appareil, ranger le chargeur ou recharger la pile à l'extérieur ou sur une surface mouillée. Garder au sec.
- Ne pas permettre que l'appareil soit utilisé comme un jouet. Être particulièrement vigilant lorsque l'appareil est utilisé par des enfants ou à proximité d'enfants.
- Utiliser cet appareil uniquement de la façon décrite dans ce guide. Utiliser uniquement les accessoires recommandés par le fabricant.
- Ne pas utiliser le chargeur si la fiche ou le cordon sont endommagés. Si l'aspirateur ou le chargeur fonctionne mal, s'il est tombé ou a été endommagé ou laissé à l'extérieur, ou s'il est tombé dans l'eau, il doit être apporté à un Centre de service pour y être inspecté, expédié à un centre de réparation pour qu'il soit vérifié.
- Ne pas tirer sur le cordon du chargeur ni utiliser le cordon du chargeur pour transporter l'appareil, utiliser le cordon comme une poignée, fermer une porte sur le cordon ou tirer le cordon autour de coins ou d'arêtes vives.
- Ne pas faire passer l'appareil sur le cordon. Garder le cordon éloigné de toute surface chauffée.
- Ne pas tirer sur le cordon pour débrancher le chargeur. Saisir la fiche et non le cordon pour débrancher le chargeur.
- Ne pas manipuler le chargeur (y compris la fiche et les bornes), la pile ou l'appareil avec les mains mouillées.
- Garder les cheveux, les vêtements amples, les doigts et toute autre partie du corps à bonne distance des ouvertures et des pièces mobiles de l'appareil.

SAVE THESE INSTRUCTIONS

