

 
ORECK® XL

SIMPLY AMAZING®

USER'S GUIDE

Multi-Purpose
Automotive Vacuum

XL AUTO Series

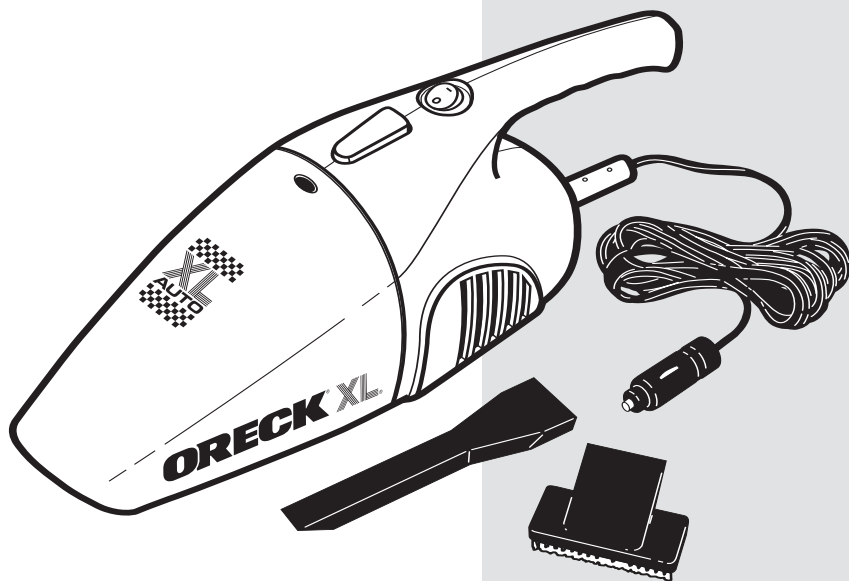

USA: 1-800-989-3535
CANADA: 1-888-676-7325



WWW.ORECK.COM



VISIT ONE OF OUR OVER
450 STORE LOCATIONS

**REGISTER YOUR PRODUCT
ON THE WEB:
WWW.ORECK.COM**

• IMPORTANT •
SAVE THIS BOOKLET!

Includes:
Important Safety Instructions
Warranty
Operating Instructions

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE
USING THIS VACUUM CLEANER



WARNING

To reduce the risk of fire,
electric shock, or injury to persons:

- Use only for intended use as described in this manual. Do not use other than manufacturer's recommended attachments.
- Do not operate with a damaged cord or cigarette lighter adapter. If appliance is not working properly, has been dropped, damaged, exposed to weather or dropped in water, return it to a service center service center or call customer service at:

USA: 1-800-989-3535 Canada: 1-888-676-7325

- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
- Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Do not use appliance in an enclosed space where oxygen, flammable, explosive or toxic vapors are given off or in an area where flammable dust is present.
- Do not allow to be used as a toy. Close attention is necessary when used by children.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Do not pick up anything that is burning or smoking such as cigarettes, matches or hot material.
- Do not pick up flammable or combustible liquids such as gasoline or use in areas where they are present.
- Always disconnect cord from electrical outlet before servicing appliance.
- Do not operate the Oreck XL Auto Car Vac when the vehicle's engine is running.

SAVE THESE INSTRUCTIONS

Warranty

ORECK MANUFACTURING COMPANY: (Oreck gives you the following limited warranty for this product only if it was originally purchased for use, not resale, from Oreck or an Oreck Authorized Retail Dealer.)

Oreck will repair or replace, free of charge, to the original purchaser, any part which is found to be defective in material or workmanship within one (1) year of the date of purchase. This limited warranty applies to commercial and normal domestic use.

This limited warranty does not cover the replacement of expendable or consumable parts such as belts, brushes, bulbs, batteries and other parts subject to normal wear.

This limited warranty does not apply to any part subjected to accident, abuse, commercial use, alteration, misuse, damage caused by fire or act of God, the use of voltages other than indicated on the serial number plate of this product or service of this product by other than Oreck or an Oreck Factory Authorized Service Center.

Oreck does not authorize any person or representative to assume or grant any other warranty obligation with the sale of this product.

Oreck's limited warranty is valid only if you retain proof of purchase from Oreck or an Oreck Authorized Retail Dealer for this product. If you purchase this product from any other source, your purchase is "AS IS," which means Oreck grants you no warranty, and that you, not Oreck, assume the entire risk of the quality and performance of this product, including the entire cost of any necessary servicing or repairs of any defects.

Oreck's liability for damages to you for any costs whatsoever arising out of this statement of limited warranty shall be limited to the amount paid for this product at the time of original purchase, and Oreck shall not be liable for any direct, indirect, consequential or incidental damages arising out of the use or inability to use this product.


Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD, AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THIS PERIOD.

Some states do not allow limitations on the duration of implied warranties, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Parts List

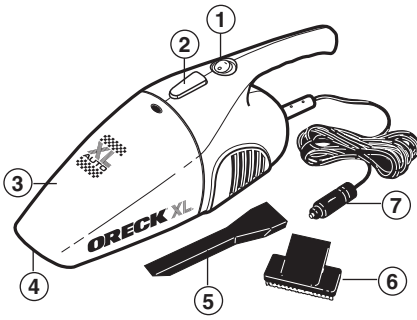

1. ON/OFF Switch
2. Dust Container Release
3. Dust Container
4. Nozzle
5. Crevice Tool
6. Brush Tool
7. Accessory Power Outlet Adapter


Note: Flexible Suction Hose not pictured.

Operating Instructions

Remove cigarette lighter from accessory power outlet and insert adapter into the outlet.

Note: Ensure adapter is fully inserted and power is supplied to the accessory power outlet. (Consult your vehicle owner's manual to determine the proper ignition setting.)


Push the power switch forward to operate vacuum.

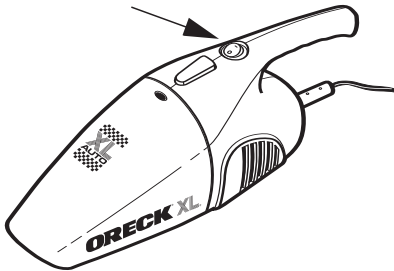

Using Attachments

To use the attachments (i.e. the crevice tool and brush tool), simply push the required tool into the nozzle as shown.

Note: When using the flexible suction hose, insert the small end of the hose directly into the nozzle. Insert attachment into larger end of suction hose.

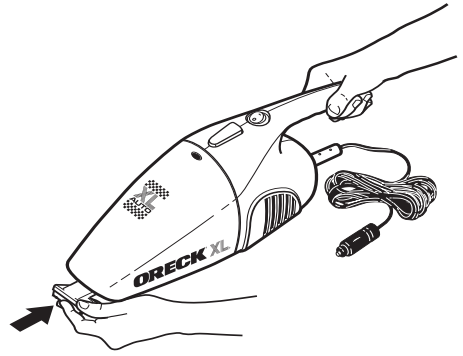

Cleaning

Note: Before emptying the dust container, turn the unit off and unplug it from the accessory power outlet.

To remove the dust container, press down on the dust container release button and gently tilt the dust container forward.

Remove the filter from the dust container and clean as shown.

Empty, wash and dry the inside of the dust container. Make sure the dust container is dry and replace the filter before reusing.

Replace dust container by attaching bottom of container with vacuum and raising up to lock in place.

